

WATERFALL INSTALLATION

When you receive your spa, you will have to **install the waterfall in its housing**. In order to facilitate the task, we recommend that you apply a lubricant to the seal to ease the installation

WATERFALL



HOUSING



Apply lubricant to **these areas**.

After applying the lubricant, **insert the waterfall into the housing** by pressing on each side and **pushing until the bottom of the waterfall is in contact with the spa**



USING THE WATERFALL

Using the handle, you can **open the waterfall by turning to the left** or turning to the right to close it.


Having any questions? You may contact our service department
info@purspas.com

ADDITIONAL INFORMATION

Your spa waterfall components are: one valve to open and close the water, be the jet core, which is located inside the waterfall housing. **This part is already assembled in the housing when your spa is manufactured. The pictures are to inform you about the flow of operation of the waterfall.** The valve is made out of two pieces that fit together and is screwed to the bottom of the housing with a one inch socket or a locking tool that you can provide yourself if needed

PAIRING OF THE TWO PIECES OF THE VALVE

VALVE INSIDE THE HOUSIN

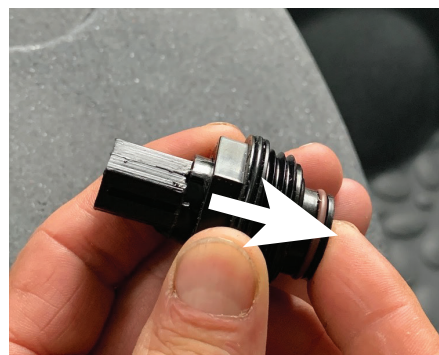

THE TWO PARTS MAKING UP THE VALVE



SLIDE INTO THE RECEPTACLE WITH THE HELP OF THE LOCKING TOOL



PARTS AVAILABLE AT RETAILERS

Complete Waterfall: PART #900-1221 • Jet Core: PART #160-0115B
Locking Tool: PART #7-25OUTIL

Having any questions? You may contact our service department
info@purspas.com